



# HDPHONE™

## Serene HD-40

*HD Amplified  
Telephone with 12  
one-touch speed  
dials*



- Telephone-line powered, no AC adapter needed
- Powerful amplifier—up to 30 dB louder
- Tone Control enables you to understand every word
- High performance speakerphone for hands-free calls
- 12 speed dial memories for one-touch dialing
- Music on hold
- Two bright visual ring flashers
- Loud ringer with adjustable ring volume and ring tone

## Hear More, Understand Better

**Just plug and play. This phone comes with these settings: amplifier comes on automatically when you lift the handset, high ringer volume and tone, tone dialing.**



# HDPHONE™

## Serene HD-40P

*HD Amplified  
Speakerphone with  
Photo Memories*



- Telephone-line powered, no AC adapter needed
- Powerful amplifier—up to 26 dB louder
- Tone Control enables you to understand every word
- High performance speakerphone for hands-free calls
- 9 easy to set up photo memories for one-touch dialing
- Music on hold
- Two bright visual ring flashers
- Loud ringer with adjustable volume and ring tone

## Hear More, Understand Better

**Just plug and play. This phone comes with these settings: amplifiers comes on automatically when you lift the handset, high ringer volume and tone, tone dialing.**

# ***It's as easy as*** ***1,2,3***

- 1. To program a number into a photo memory button**
  1. Lift the handset and press PROG (ignore any dial tone or busy tone in handset)
  2. Enter the phone number on the dial pad
  3. Press PROG
  4. Press the photo memory button where you wanted to store this number
  5. Return the handset to its cradle
  6. If you made a mistake or want to program a new number into the same memory button, repeat the above steps
- 2. To dial from photo memories---lift the handset and press the desired photo memory button**
- 3. To adjust Volume (the amplifier must be on)—slide the VOL switch to suit**
- 4. To adjust Tone (the amplifier must be on)---slide the TONE switch until you hear and understand the best**
- 5. To talk hands-free---press SPEAKER to turn on speakerphone**

# ***It's as easy as*** ***1,2,3***

- 1. To program a number into a speed dial memory**
  1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
  2. Enter the phone number on the dial pad
  3. Press PROG
  4. Press the memory button where you wanted to store this number
  5. Return the handset to its cradle
  6. If you made a mistake or want to program a new number into the same memory button, repeat the above steps
- 2. To speed dial from memories---lift the handset and press the desired memory button**
- 3. To adjust Volume (the amplifier must be on)—slide the VOL switch to suit**
- 4. To adjust Tone (the amplifier must be on) ---slide the TONE switch until you hear and understand the best**
- 5. To talk hands-free---press SPEAKER to turn on the speakerphone**