



HDPHONE™

Serene HD-60

HD Amplified Telephone with 55 dB amplification and 12 one-touch speed dials



- Large back-lit and easy to read keys
- Powerful amplifier—up to 55 dB louder
- Tone Control enables you to understand every word
- 12 one-touch speed dials
- Two bright visual ring flashers
- Loud ringer with adjustable ring volume and ring tone

Hear More,
Understand Better

Just plug and play. This phone comes with these settings: amplifier comes on automatically when you lift the handset, high ringer volume and tone, tone dialing.



HDPHONE™

Serene HD-60

HD Amplified Telephone with 55 dB amplification and 12 one-touch speed dials



- Large back-lit and easy to read keys
- Powerful amplifier—up to 55 dB louder
- Tone Control enables you to understand every word
- 12 one-touch speed dials
- Two bright visual ring flashers
- Loud ringer with adjustable ring volume and ring tone

Hear More,
Understand Better

Just plug and play. This phone comes with these settings: amplifier comes on automatically when you lift the handset, high ringer volume and tone, tone dialing.

It's as easy as 1,2,3

- 1. To program a number for one-touch speed dialing (M1-M12)**
 1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
 2. Enter the phone number on the dial pad
 3. Press PROG and then press the memory button (M1-M12) where you wanted to store this number
 4. Return the handset to its cradle
 5. If you made a mistake or want to program a new number into the same memory button, repeat the above steps
- 2. To speed dial by one-touch---lift the handset and press the desired memory button (M1-M12)**
- 3. To adjust Volume (the amplifier must be On)—slide the VOL switch to suit**
- 4. To adjust Tone (the amplifier must be On)---slide the TONE switch until you hear and understand the best**

It's as easy as 1,2,3

- 1. To program a number for one-touch speed dialing (M1-M12)**
 1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
 2. Enter the phone number on the dial pad
 3. Press PROG and then press the memory button (M1-M12) where you wanted to store this number
 4. Return the handset to its cradle
 5. If you made a mistake or want to program a new number into the same memory button, repeat the above steps
- 2. To speed dial by one-touch---lift the handset and press the desired memory button (M1-M12)**
- 3. To adjust Volume (the amplifier must be On)—slide the VOL switch to suit**
- 4. To adjust Tone (the amplifier must be On)---slide the TONE switch until you hear and understand the best**